

STARKE *ARVID*

Instructions for Use

Ceiling Lift



Dear Customer!

Thank you for choosing a STARKE ARVID® product.

We have more than 25 years of experience within the construction business. We develop, manufacture and sell equipment intended for professional material management. Starke Arvid's product assortment includes a total of 20 different products.

Browse in at www.starkearvid.se

General use and safety regulations:

- Maximum load may not be exceeded
- Place the load centrally on the beam.
- Check for any damage to the castors.
- Distribute the weight evenly throughout the frame.
- Under no circumstances may a person be allowed under the load.
- Use the necessary safety equipment.

General maintenance and care instructions:

- Adjust the tension of the chains occasionally.
- All mobile parts must be greased once a month.
- Check all mobile parts as well as welding joints, wheels and other material at least once a year.
- Remove any outer rust and coat with anti-corrosive paint..
- Replace worn parts.
- When unsure, contact Alia AB.





Technical Data

Ceiling Lift

Article no:	70001
Maximum load:	70 kg
Width:	750 mm
Length:	750 mm
Height:	1700-3200 mm
Weight:	24 kg
Wheels (type):	5 off. Castors 2 off. Lockable

Service/Extra parts:

A number of retailers for STARKE ARVID® products are available for your basic security. If you have any questions regarding service or extra parts turn to you nearest retailer or directly to ALIA AB.

Gaurantee:

Under the condition that all instructions for use have been followed, we offer a one-year guarantee according to NL 01.
The product may not be modified by the user.

*Produced and
marketed by:*

Alia AB
Box 93
SE-459 22 LJUNGSKILE

Phone: +46-(0)522 22 000
Fax: +46-(0)522 22 344

office@starkearvid.se
www.starkearvid.se