

NOTICE! This quick guide is a brief summary of the use of DINO access platform and does not replace the operating instructions for the device.

Read the operating instructions and make sure that you understand all of the instructions and warnings before using the device.


LIFT FUNCTIONS

Boom rotation:

continuous

Basket rotation:


90°

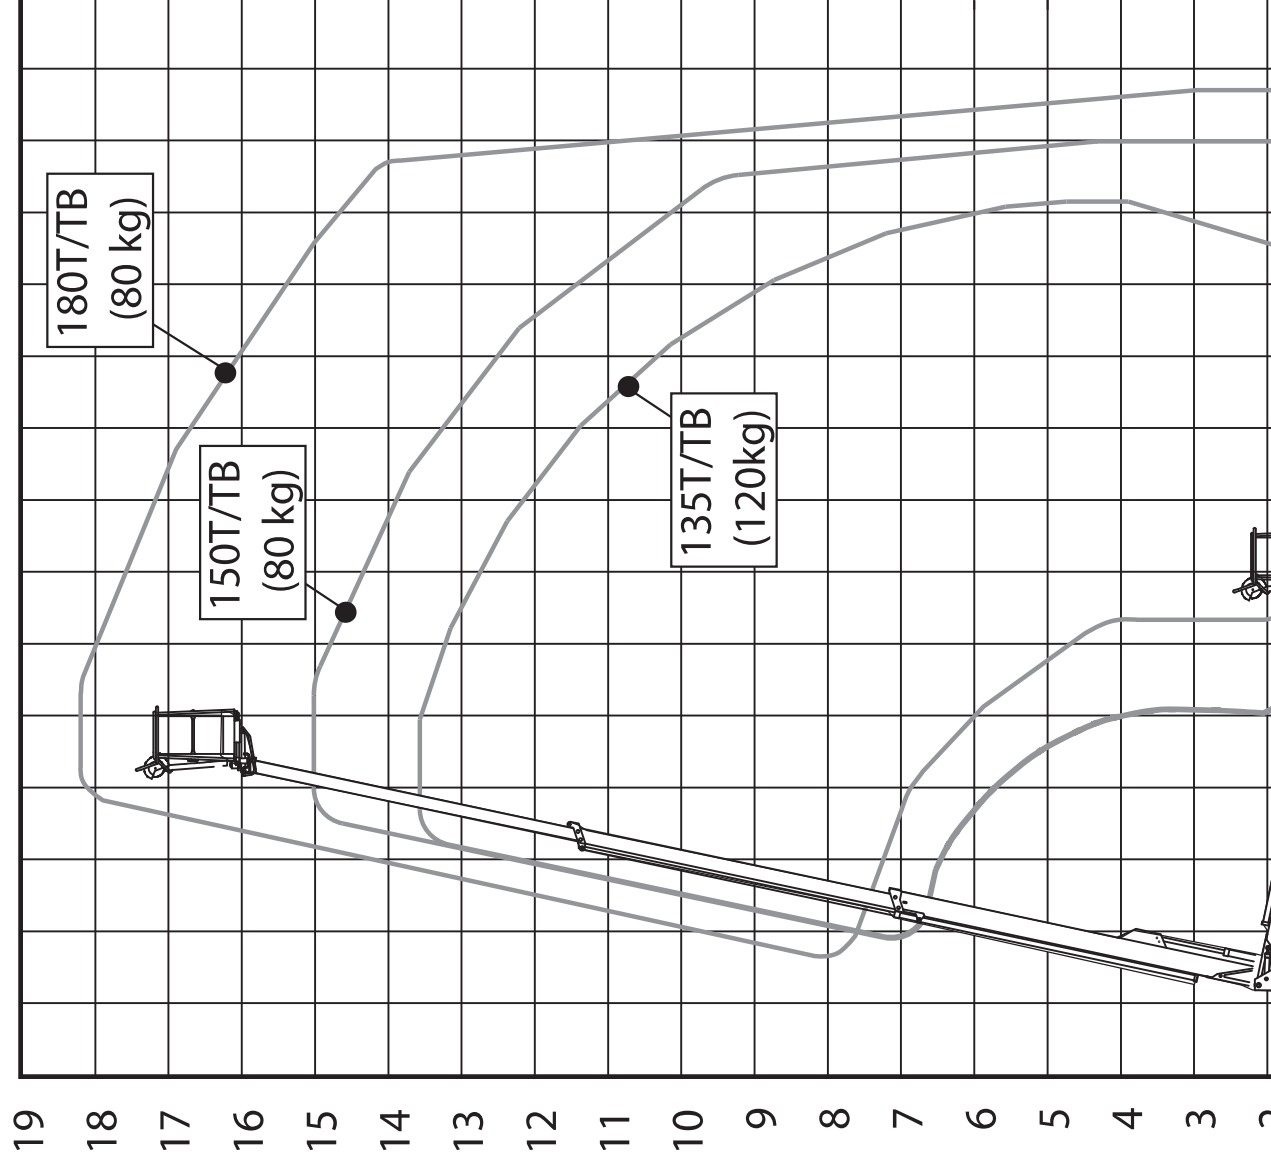

LCB

Mains switch

WORK SAFELY

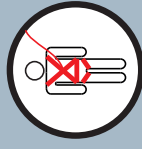

- This quick guide does not replace the operating instructions. Read the operating instructions before using the lift

- The lift operator must be over 18 years old
- The use of a faulty lift is strictly forbidden

- The use of the lift is forbidden if the temperature is below -20°C and/or the wind speed over 12,5 m/s

Controls for safety devices:



Emergency descent system start-up. (UCB + LCB)



Sound signal (UCB)



Emergency stop (UCB + LCB)

POWER SOURCES



Mains power



Petrol engine Battery-operated (option) emergency descent



Choke




Engine start / stop

Please note information related to power sources:

- The aggregate does not start if the lift is connected to the mains
- Maximum cable length in mains network 25 meters (2,5m² cable), fuse 10 A.
- Make sure that the batteries have time to charge sufficiently with aggregate or mains power.
- A timer automatically disconnects the supply voltage 1 hour after last operation of the electric or combustion engine. Re-activate by pressing the start button
- If the engine does not start, make sure that none of the emergency stop buttons has been pressed down.

LIFT SUPPORT

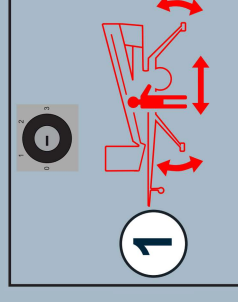

- Max support force on the outriggers


135T: 11300 N (1150 kg)

150T: 12800 N (1300 kg)

180T: 16800 N (1700 kg)

NOTICE! Support outriggers

OPERATING THE LIFT FROM CH

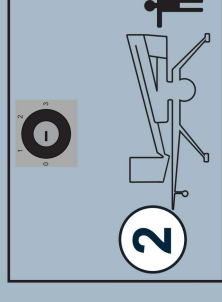

Indicator light



The boom



Over

Boom movements can be used from the ground.

TOWING AND USING THE DRIVING DEVICE WITH THE LIFT IN THE TRANSPORT POSITION


The lift may only be moved in the transport position

- The boom lowered on the boom support
- The cover of the platform control centre closed
- Outriggers fully up
- No objects on the platform or the chassis
- Make sure that the electrical cable is disconnected or the cable is long enough

Towing the lift

- Connect the ball-coupling and cable
- Connect the power line and check the lights
- Release the parking brake
- Lift up the jockey wheel
- Make sure that the driving device is not connected

OPERATING THE LIFT FROM PL

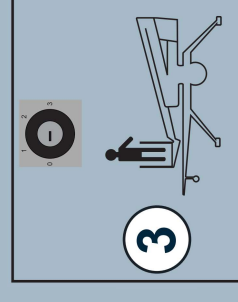

Indicator light



The lift



Over limit

The control panel symbols:



Telescope in / out