

STARKE **ARVID**

Instructions for Use

Transit Bench



Dear Customer!

Thank you for choosing a STARKE ARVID® product.

We have more than 25 years of experience within the construction business. We develop, manufacture and sell equipment intended for professional material management. Starke Arvid's product assortment includes a total of 20 different products.


Browse in at www.starkearvid.se

General use and safety regulations:

- In order to lower the bench to the horizontal position, push the lowering pedal and pull the bench toward you.
- In order to raise the bench to the vertical position, pull the lowering handle upwards and raise the bench.
- When transporting and working with 900 mm gypsum boards, fold the lowering plane in order to centralize the gypsum boards on the bench.
- In order to fix the rubber wheels in a lowered position, place the pin in the designated hole in the centre of the bench.
- The sawing support is used to work with pre-sawn gypsum boards standing on edge.
- Maximum load must not be exceeded.

General maintenance and care instructions:

- Check the following daily:
 - That the castors can be rotated and braked.
 - That there are no damages to the rubber wheels.
- All mobile parts must be greased once a month.
- Check all mobile parts as well as welding joints, wheels and other material at least once a year.
- Remove any outer rust and coat with anti-corrosive paint..
- Replace worn part..
- When unsure, contact Alia AB.

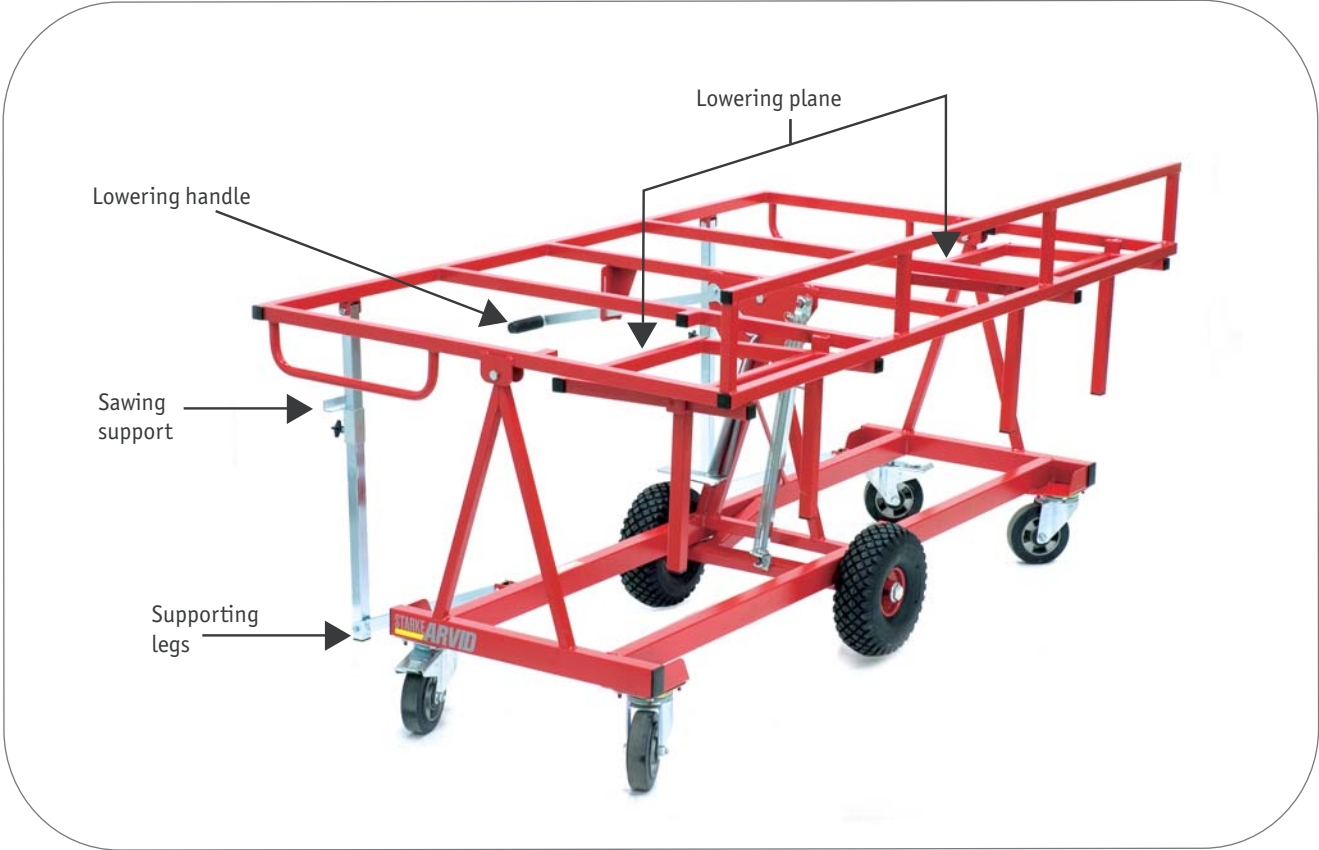

900/1200 mm bench in lowered position



900 mm bench in raised position



2 off. braked castors



Supporting legs in lowered position

Technical Data

Transit Bench

	900	900/1200
Article no:	10400	10600
Maximum load:	500 kg	500 kg
Width, raised:	720 mm	720 mm
Length:	2025 mm	2025 mm
Height, raised:	1310 mm	1470 mm
Working level:	870 mm	870 mm
Weight:	85 kg	100 kg
Wheels (type):	(polyurethane-filled)	
	2 off. 4.00x4"	
	4-layered	
	(double braked castors with bearings)	
	2 off. 160 mm	
	2 off. 160 mm (braked)	

Service/Extra parts:

A number of retailers for STARKE ARVID® products are available for your basic security. If you have any questions regarding service or extra parts turn to you nearest retailer or directly to ALIA AB.

Gaurantee:

Under the condition that all instructions for use have been followed, we offer a one-year guarantee according to NL 01. The product may not be modified by the user.

Produced and marketed by:

Alia AB
Box 93
SE-459 22 LJUNGSKILE

Phone: +46-(0)522 22 000
Fax: +46-(0)522 22 344

office@starkearvid.se
www.starkearvid.se